

## ○ Fitting Instructions PGSM01 ○

Use with PGSP01 Pin

1. Remove complete linkage & mechanism from vehicle
2. Before you disconnect the gear link rod, mark it with paint or felt tip pen showing the EXACT POSITION & DEPTH into the mechanism clamp.  
See No 6 to explain
3. Take off black plastic cap from pin, remove old mechanism & discard.  
Smear the grooved pin with grease.
4. Fit new mechanism over greased pin then fit black plastic cap on top ensuring the four clips have clicked into place [a good push is required] gently try to pull it back off to make sure it's on correctly.
5. Fit complete linkage back onto vehicle.
6. Align gear link rod into the linkage clamp with the paint / felt pen mark you made before earlier removal. This is VERY IMPORTANT! If you fail to do this, you will select gears in the wrong order, or the whole system will be very stiff due to the link rod being out of alignment.

